EN

MS-4274UP

User Manual



Thank you for choosing the MS-4274UP Hydro Dermabrasion System.
This multi-function skincare device combines hydro dermabrasion, diamond microdermabrasion, and facial mist infusion technologies to help cleanse, exfoliate, and refresh the skin.
Designed for at-home skincare routines, the system helps remove surface impurities, improve the appearance of dull skin, and support better absorption of skincare products.

Content

1.Benefits 1
2.Contraindications 1
3.Technical Specification 2
4.Packing List 2
5.Installation 4
6.User Guide 7
7.Troubleshooting Guide 23
8.FAQ 24
9.Warranty and support 25

EN

1.Benefits


1. Helps remove dead skin buildup
2. Helps improve skin texture
3. Helps reduce the appearance of clogged pores
4. Leaves skin feeling smoother and refreshed
5. Supports better absorption of skincare products

2.Contraindications

Please consult a healthcare professional before use if any of the following conditions apply to you:


1. Extremely sensitive or allergy-prone skin
2. Open wounds, irritation, or damaged facial skin
3. Active skin infections or contagious skin conditions
4. Recent cosmetic injections, facial procedures, or surgery
5. Facial implants or implanted cosmetic materials

3.Technical Specification

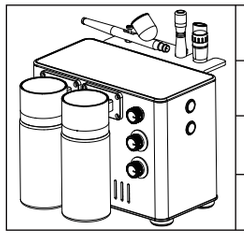

Power supply Input: AC110V-230v 50HZ-60Hz	Net Weight: 4.3KG
Power: 26W	Gross Weight: 5.1KG
Dimensions: 27*27*24CM	
Input Power: 26W	


4.Packing List

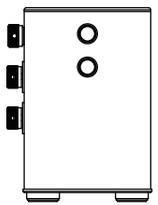


Main host × 1




Diamond microdermabrasion tube × 1




Hydro Dermabrasion handle × 1

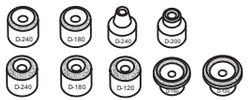

Diamond microdermabrasion tips × 9

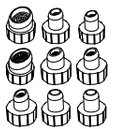

Hydro tips × 9

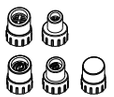

Hydro silicone tips × 5




Spray gun × 1



Support plate × 1



Storage Box ×1

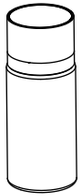

Fresh water bottle × 1



Hose × 2



Accessory package x 1




L-shaped hexagonal black wrench × 1


Small brush × 1



Sponge cleaning cup brush × 1

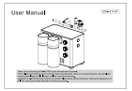

User manual × 1

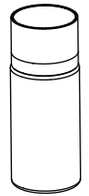

Waste water bottle × 1



Pack screws × 2



Power adapter × 1




Power cord × 1


Note: Please inspect the main unit and all accessories upon unpacking. Ensure that all items are included and undamaged before disposing of any packaging materials.

5.Installation


1.1 Install the accessory bracket.

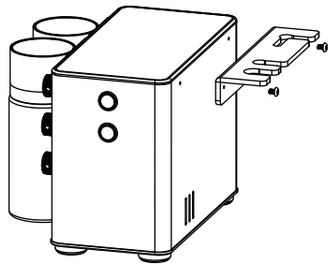


1.2 Connect the Hydro Dermabrasion Handle. Connect the black tube to the Recycle port and the clear tube to the Solution port. Push both tubes firmly into place.

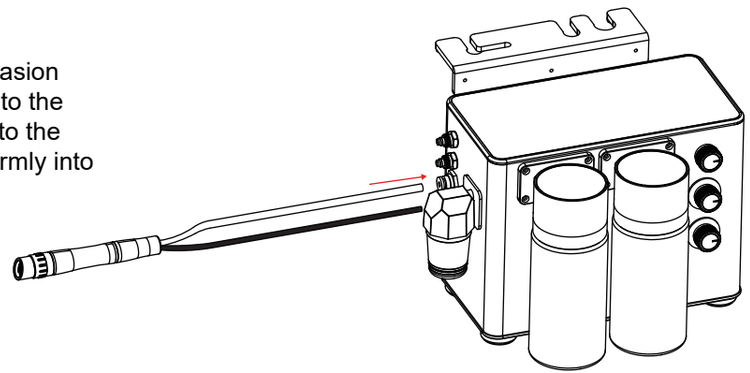


1.3 Connect the Spray Hose. First, unscrew the connector nut on the back of the main unit. Feed one end of the hose through the nut. Connect the hose to the Spray port and tighten the nut securely. Attach the other end of the hose to the spray handle.

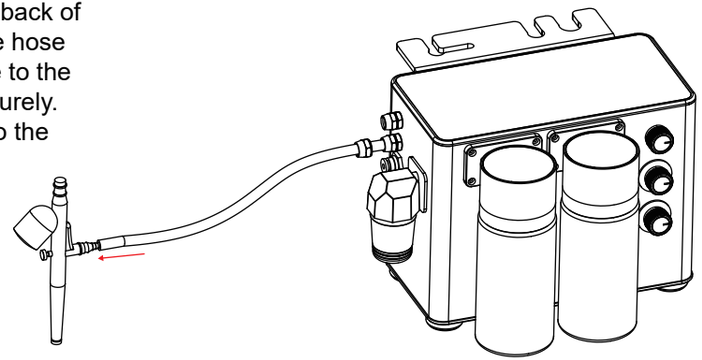


1.4 Connect the Microdermabrasion Hose. First, unscrew the connector nut on the back of the main unit. Feed one end of the hose through the nut. Connect the hose to the Suction port and tighten the nut securely. Attach the other end of the hose to the microdermabrasion handle.

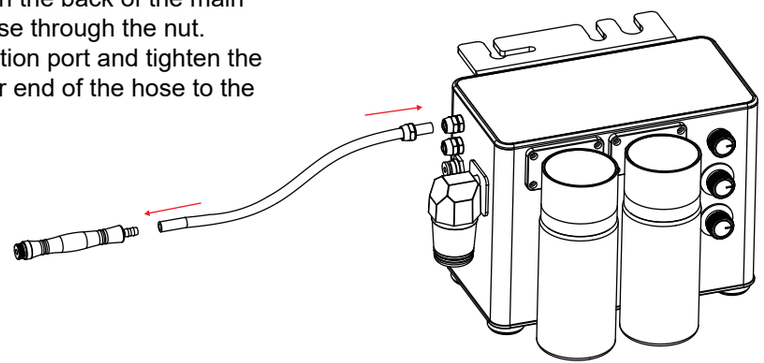

1.5 Install the Water Bottles. Insert the clean water bottle into the Fresh Water slot and press firmly into place. Insert the waste water bottle into the Waste Water slot until securely fitted.

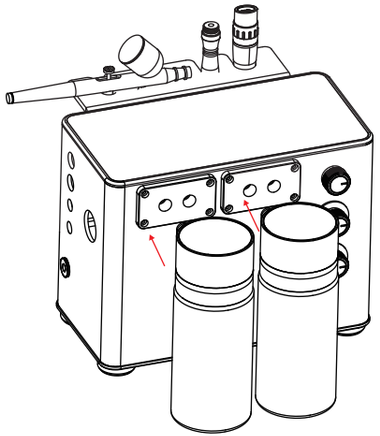


1.6 Place the Handles on the Bracket. Place all handles securely onto the accessory bracket after installation is complete.

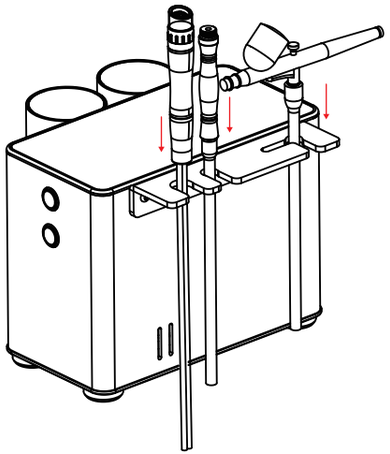



6.User Guide

1.Hydro


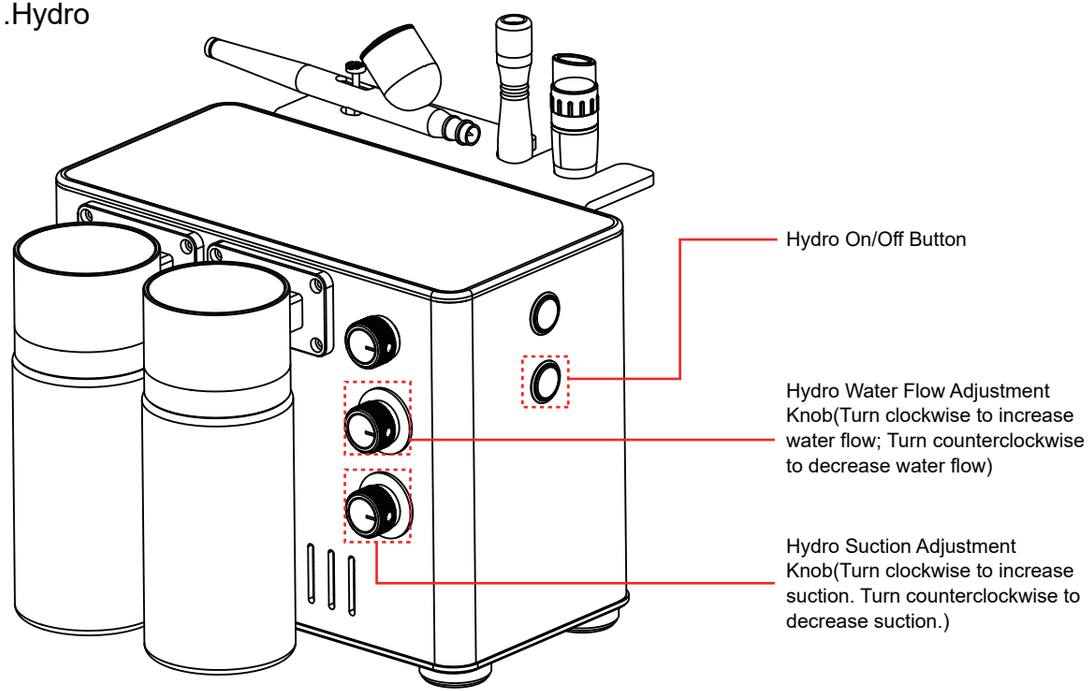


1.1 How to Choose Hydro Tips

Transparent Hydro Dermabrasion Tip: Designed for deep cleansing and exfoliation. Helps remove excess oil, surface debris, and impurities from pores while supporting smoother-looking skin. Best suited for oily and combination skin types.

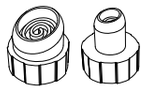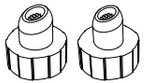
	Spiral Tip: Designed for deeper pore cleansing. Helps loosen and remove excess oil, buildup, and impurities from the skin surface and pores..
	Flat Tip: Suitable for cleansing grease, dust and keratin over large skin areas.
	Straight Tip: Ideal for narrow or hard-to-reach areas such as around the nose, upper lip, and eye area. Helps cleanse surface debris and makeup residue.
	Focus Tip: Designed for targeted areas that need more precise cleansing, especially areas with visible pore buildup or excess oil.

Silicone Hydro Tip: Made from soft, flexible silicone for a gentler skincare experience. Helps reduce friction and improve comfort during use, making it ideal for sensitive and dry skin types. Also supports smoother application of skincare solutions.

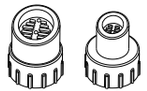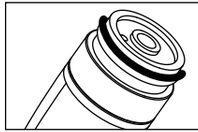
	Straight Tip: Ideal for narrow facial areas such as the sides of the nose, upper lip, and around the eyes. Helps gently remove surface impurities and makeup residue.
	Spiral Tip:Designed for gentle deep cleansing. Helps remove excess oil, pore buildup, and surface impurities while providing a softer touch for sensitive skin.
	Sealing head Note: Flush the system with clean water after each use to help maintain optimal performance. Attach the sealing cap to the handle, fill the Fresh Water bottle with clean water, and empty the Waste Water bottle. Run the device at maximum water flow and suction until the tubing is fully cleaned.
	Note: Before installing a silicone tip, remove the rubber ring from the hydro dermabrasion handle to ensure the tip fits securely in place.

1.2 How to Install the Transparent Hydro Dermabrasion Tip


① Ensure the rubber ring is attached to the hydro dermabrasion handle. (The rubber ring is pre-installed before shipment.)

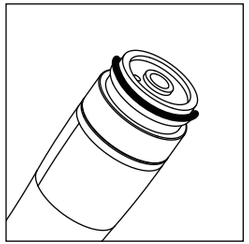

② Select the desired transparent tip and attach it securely to the handle.

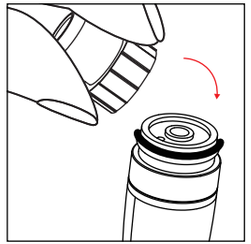


③ Remove the Fresh Water bottle from the main unit.

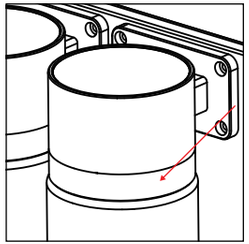

④ Fill the Fresh Water bottle with hydro solution or purified water.




⑤ Reinstall the fresh bottle securely onto the main unit.

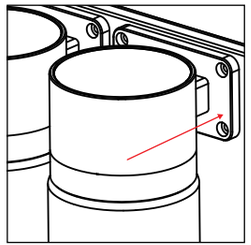


1.3 How to Install the Silicone Hydro Dermabrasion Tip


① Remove the rubber ring from the hydro dermabrasion handle (The rubber ring is pre-installed before shipment.)

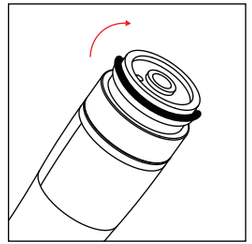


② Select the desired silicone tip and attach it securely to the handle.

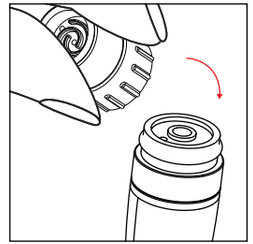


③ Remove the Fresh Water bottle from the main unit.

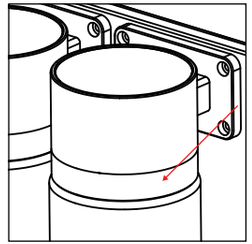

④ Fill the Fresh Water bottle with hydro solution or purified water.

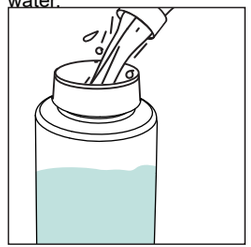

⑤ Reinstall the fresh bottle securely onto the main unit.

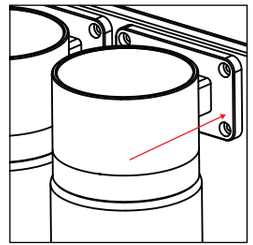

1.4 How to Use

Recommended Solution: Clarifying Solution + Blackhead lotion.

• Select a suitable hydro dermabrasion tip and skincare solution based on your skin type and skincare needs.

• Adjust the suction and water flow according to your personal tolerance level.

• Begin at the chin and gently glide the handle upward across the skin using slow, even motions. Continue section by section across the face. For areas around the nose, use small circular motions for more detailed cleansing.


Tips: Gently wipe the skin with a damp cotton pad as needed during use.

• Recommended Usage Frequency:

Oily skin: Once per week;

Combination skin: Once every two weeks;

Normal/Dry skin: Once every three to four weeks.

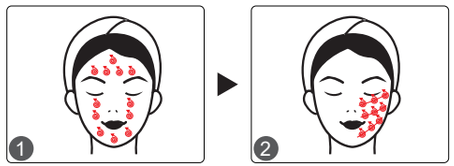

1.5 Precautions ⚠


• Start with the lowest suction setting and gradually increase the intensity as your skin becomes accustomed to the device. This helps reduce discomfort and excessive pulling on the skin.

• Perform a patch test before first use, especially if you have sensitive skin.


1.6 Cleaning and Maintenance

Cleaning the Hydro Dermabrasion Tips:


① Use the included cleaning brush to remove residue from inside the tip under running water.

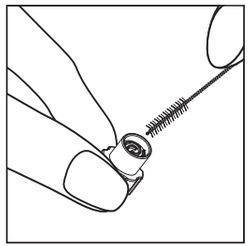

② Soak the tips in saline solution or rubbing alcohol for approximately 5 minutes.

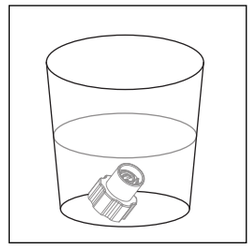


③ Rinse thoroughly with clean water and allow all parts to air dry completely before storing them in the storage case.

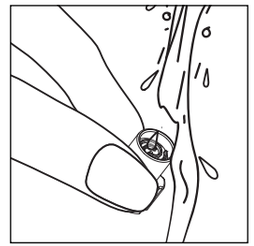


Cleaning the Fresh Water and Waste Water Bottles:

① Cleaning the Fresh Water and Waste Water Bottles.

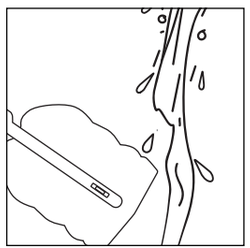


② Insert the brush into the bottle and gently scrub the interior walls.

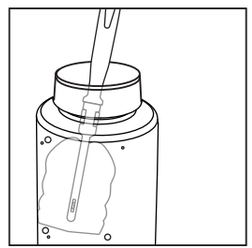

③ Rinse thoroughly with clean water and allow the bottles to dry completely before reuse.



2.Microdermabrasion

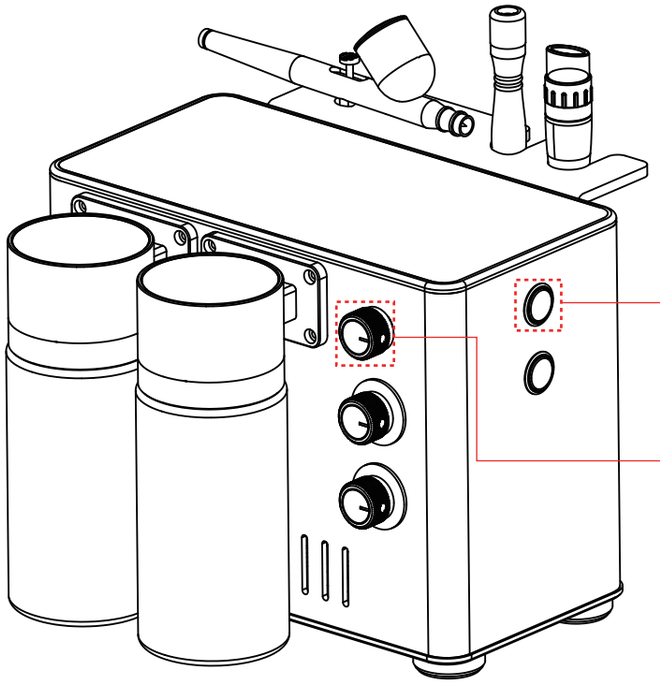


Microdermabrasion On/Off Button

Microdermabrasion suction adjustment knob(Turn clockwise to increase suction. Turn counterclockwise to decrease suction.)

EN

2.1 Choosing a Diamond Microdermabrasion Tip

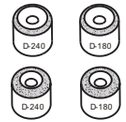D-240 & D-180 	For large facial areas.	
D-240 & D-200 	For small areas around the eyes or nose.	
D-180 & D-120 	For large facial areas or body joints.	

D-240 Tip: Finest exfoliation for a gentler skincare experience.

D-120 Tip: Strongest exfoliation for deeper resurfacing.


Lower grit numbers provide stronger exfoliation, while higher grit numbers provide a gentler effect.

Note : Do not hold the microdermabrasion tip on the same area for more than 3 seconds.


2.2 How to Install the Microdermabrasion Handle

Follow the steps below to install the microdermabrasion handle. The red arrows in the figure highlight the key operations and connection points.


① Check that the black rubber ring is properly installed on the handle. Replace it if damaged or missing.

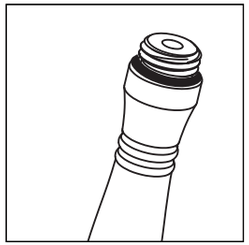


② Insert a cotton filter into the handle opening.

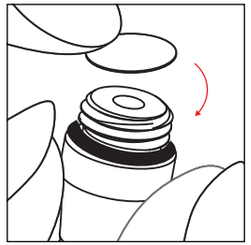


③ Attach the desired diamond tip securely to the handle.

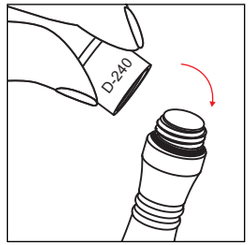

④ Connect one end of the hose to the microdermabrasion handle.

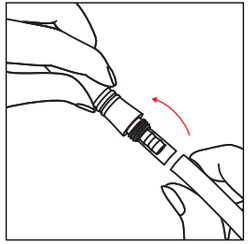

⑤ Connect the other end of the hose to the suction port on the main unit.

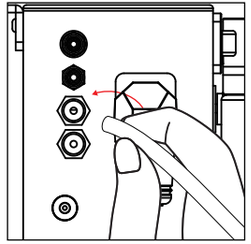

2.3 How to Use

• Clean your face with a gentle facial cleanser before use.

• Select a suitable diamond tip based on your skin type and skincare needs.

• Adjust the suction level to a comfortable setting before use.

• Begin at the chin and gently glide the handle upward across the skin using slow, even motions. Continue section by section across the face. For the nose area, use shorter gliding motions for more detailed exfoliation.


Tips: Gently wipe the skin with a damp cotton pad as needed during use.

Recommended Usage Frequency:

• Oily Skin: Once every two weeks

• Normal / Combination Skin: Once every three to four weeks

• Dry or Sensitive Skin: Once every four to six weeks

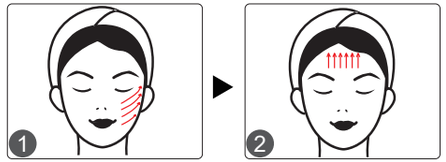

2.4 Precautions


• Always begin with the lowest suction setting and gradually increase intensity as your skin becomes accustomed to the device.

• Always install the cotton filter before use. Using the device without a filter may allow debris to enter the internal tubing and affect device performance.

• Perform a patch test before first use, especially if you have sensitive skin.

2.5 Cleaning and Maintenance


- Use the included cleaning brush to remove residue from the tip under running water.
- Rinse thoroughly and allow all parts to air dry completely before storage.
- Store all accessories in a clean, dry place.

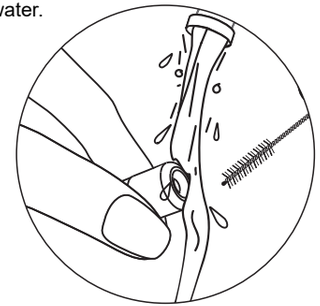

Note: ⚠

- Replace the diamond tip every 3 months.
- Replace the cotton filter every 3 uses.

3.Spray

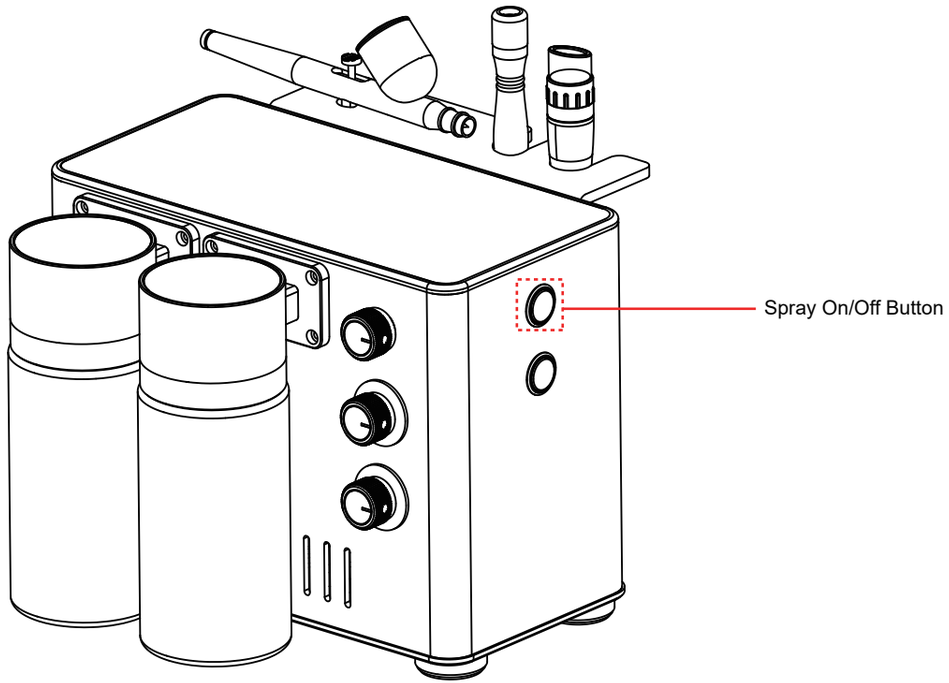


3.1 Spray Handle Installation

Follow the steps below to install the microdermabrasion handle. The red arrows in the figure highlight the key operations and connection points.


① Remove the spray bottle cap and fill the bottle with purified water, toner, saline solution, or diluted skincare solution. (Recommended dilution ratio for concentrated skincare solutions: 1:10)




② Reattach the bottle cap securely.

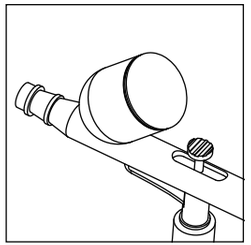


③ Connect one end of the hose to the Spray port on the main unit.

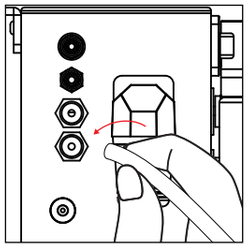


④ Connect the other end of the hose to the spray handle.

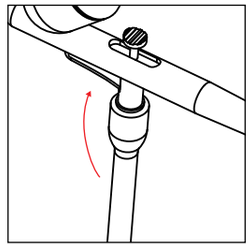

⑤ Pull the trigger gently to release the mist.

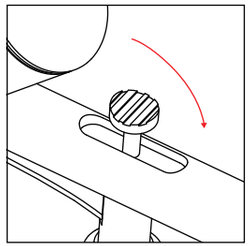

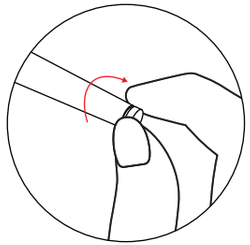

Note: If the trigger feels stuck, rotate the adjustment ring at the rear of the handle counterclockwise 2–3 turns.

3.2 How to Use


Follow the steps below for an optimal spray application session.

- Fill the spray bottle with the desired solution.
- Hold the spray handle approximately 15–20 cm (6–8 inches) away from the face.
- Apply the mist using slow, circular motions across the skin.
- Recommended Usage Frequency:

Normal Skin: 2-3 times per week

Dry Skin: Once daily

Oily / Combination Skin: 2-3 times per week

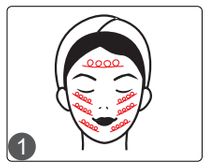

3.3 Cleaning the Spray Handle

• Fill approximately one-third of the bottle with clean water.

• Turn on the device and spray until the bottle is empty to flush the internal tubing.

3.4 Precautions

Avoid using highly concentrated liquids, as they may clog the spray nozzle.

If the spray nozzle becomes clogged, gently clean the opening with a fine needle.

4. Aftercare Tips

- Apply moisturizer after use
- Use sunscreen (SPF 30+) daily
- Avoid exfoliating acids for 24 hours
- Avoid excessive sun exposure immediately after use

7.Troubleshooting Guide

Please review the following solutions before contacting customer support.

1. No Suction From the Hydro Dermabrasion Handle

① Ensure the suction control is set above the minimum level.
② Check that the filter and Waste Water bottle are installed correctly.
③ Empty the Waste Water bottle if it is full.
④ Ensure all tubing connections are secure and properly installed.

2. No Suction From the Microdermabrasion Function

① Ensure the suction level is set above the minimum setting.
② Check that the hose is connected to the correct suction port.
③ Make sure the hose is securely attached to the handle.
④ Inspect the rubber ring and replace it if damaged or missing.
⑤ Check the hose for cracked or damage and replace if necessary.

3. Spray Function Not Dispensing Mist

① The liquid may be too concentrated and could be clogging the nozzle.
② The rear adjustment ring may be tightened too far.
③ Clean the nozzle gently using a fine needle if blocked.

4. Need Additional Assistance?

If the issue continues after following the steps above, please contact Customer Support for further assistance.

8.FAQ

1. Will microdermabrasion make my skin thinner or more sensitive?

No. When used as directed, microdermabrasion gently exfoliates the outer layer of dead skin cells without damaging healthy skin. Most users notice that their skin feels smoother, softer, and more refreshed after use.

2. Why does my skin look slightly red after using the Hydro Dermabrasion function?

Mild redness after use is normal and temporary. The suction and exfoliation process may increase circulation near the skin surface, which can cause slight redness for a short period of time. Applying a moisturizer after use is recommended to help keep the skin comfortable and hydrated.

3. Can I wear makeup after using the device?

Yes. Many users find that makeup applies more smoothly after use because the skin feels cleaner and more hydrated. For best results, apply a moisturizer before makeup application.

4. How soon can I expect to see results?

Many users notice smoother- and cleaner-looking skin after the first use. With regular use, the device may help improve the appearance of dullness, clogged pores, and uneven skin texture.

5. Will my skin become dependent on the device?

No. This device is designed to support your regular skincare routine by helping cleanse and exfoliate the skin. If you stop using the device, your skin will simply return to its normal skincare condition over time.

9.Warranty & Support

A one-year warranty will be provided starting from the date of your purchase.

If you have any questions during use or any problems with the product, you can contact our customer service. We can also provide you with more professional skincare guidance.

You can scan the QR code below to watch the video on the installation and operation of the instrument.

